

Operating instructions Heki 3plus rooflight



Opening/closing the acrylic dome

To open, turn the crank until a resistance is felt (maximum opening angle 70°)

To close, turn the crank until the acrylic dome is lying flat, then turn the crank for another 2-3 turns to lock the rooflight completely. To check whether the rooflight is properly locked, try to push the acrylic dome upwards with your hand.



Opening/closing the blind and fly net

Pull the end rod from the recessed part and push it in a position you desire.
(Both systems are adjustable in any positions and can be used independently from each other.)



Adjusting

Attention: When there is strong sunshine, the blind should be closed only 2/3 (the heat trapped between the blind and the acrylic dome could damage plastic components).

Safety precautions:

- repairs should be carried out only by trained personnel
- inform an approved dealer in case of defects and malfunctions
- before starting off, check the rooflight for damage in the acrylic dome (tension cracks) and the opening mechanism which could arise owing to, for example, branches and other natural causes.
- do not step on the acrylic dome
- close the rooflight before starting off (check whether it is locked)
- do not leave the vehicle with the rooflight open (danger of burglary or from rain)
- do not open in strong wind or rain
- before opening, remove snow, ice, dirt, etc. from the acrylic dome
- malfunctions are to be repaired by an approved dealer at once
- do not use caustic detergents (danger of tension cracks in the acrylic dome)

Care instructions:

- Please clean the acrylic dome with the Seitz acrylic cleaner.
- Opaque spots and light scratches on the acrylic dome can be removed with the Seitz Acrylic Polish and the Seitz Special Polishing cloth
- Use talcum powder regularly (4 times yearly) to care for the rubber seals
- Clean the blinds only with water and mild soap suds

The guarantee becomes null and void if the care and safety instructions are not followed.